



Grace Digital Mondo Navigational Knob Replacement

Replace the navigational knob for the Grace Digital MONDO.

Written By: Nathaniel Brabham



INTRODUCTION

One of the easiest replacements for the device. A simple removal of the navigational knob with your hands.

Step 1 — Navigational Knob



- Remove the navigational knob with your hands by pushing one side of the knob outward.
- ⓘ A clicking sound will indicate when the navigational knob has been removed from its track.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 05:42:56 AM.